

FEATURES:


- Made from cellular PVC.
- Pre-finished blue and white to match other PermaPorch® components.
- Can be painted following acceptable paint manufacturer's recommendations.
- Each piece measures 5 1/2" x 12' & 16' (approx. 4.625 ft.²) (± 1/8" tolerance)
- Packaged in bundles of 8 pieces 12' = 37 ft.² / 16' = 49.28 ft.²
- Works great as wainscoting or shower stalls.

Hidden fastening (blind nail).

NOTES:

1. If PermaPorch® Ceiling is to be installed in environments that are likely to exceed 130°F in attic, it must be installed on 16" centers.
2. Attic where PermaPorch® Ceiling is installed should be well ventilated. Check with local building code.
3. Ambient Temperature should be 65°F to 75°F during installation.
4. PermaPorch® Ceiling is not load bearing.
5. Pre-finished white to match other PermaPorch® Ceiling products.
6. See Paint Manufacturer's recommendations & instructions for finishing PermaPorch® Ceiling.

PermaPorch® Ceiling Installation Instructions

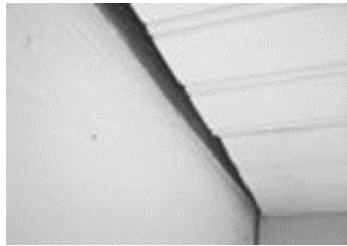


1. Allow 1/4" on each end of porch for expansion.




2. With the nailing fin positioned away from the wall, face nail the first piece against one side of the ceiling.



3. Nail the nailing fin on the first piece at 24" centers maximum. (See note 1)

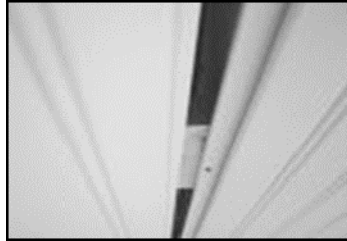


4. Insert the next piece into the slot and continue nailing through the fin at 24" centers maximum until ceiling is completely covered.

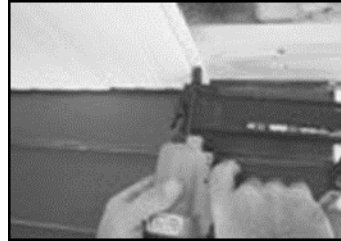

5. Optional fastening method. 16 gauge pneumatic nailers or staples are acceptable for steps two and three. Recommend 75-80 PSI but suggest testing pressure and depths prior to proceeding.




6. Use clear PVC cement where plank ends are to be butted together.

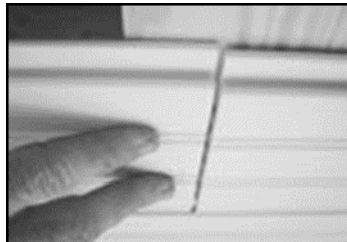


7. Ensure butt joints occur on nailers, secure each end to nailers.




8. The last piece will probably need its width adjusted. Measure, mark and rip to the desired width.

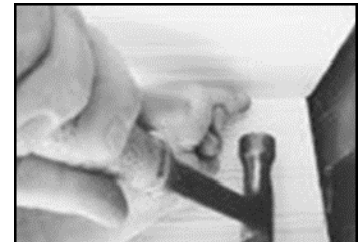


9. Face nail the last piece as close to the wall as possible ensuring to leave an expansion joint. Keep in mind the nail or screw should be close enough to conceal with trim pieces.

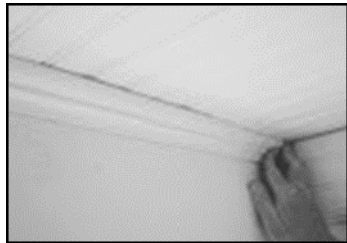

10. Trim with your choice of PermaPorch® Ceiling Molding. Install using finish nail or screws. Glue joints with PVC glue and finish with latex caulk.

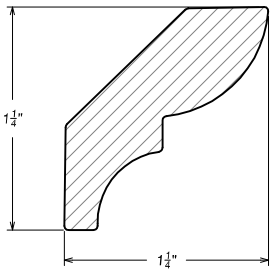


#56107

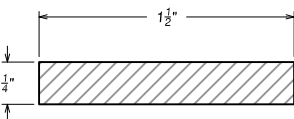

#56108

Available Moldings
(Sold Separately)

PermaPorch® Ceiling Cross Section

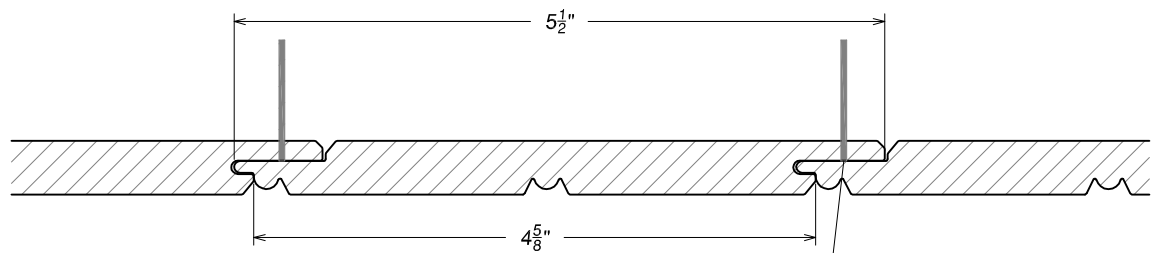

Fasteners @ Max. 24" O.C.
(See Note #1)

WARRANTY IS VOID IF INSTALLATION INSTRUCTIONS ARE NOT FOLLOWED

HB&G
BUILDING PRODUCTS

1015 Brundidge Blvd.
P.O. Box 589
Troy, Alabama 36081
334.566.5000
www.hbgcolumns.com
©2023 HB&G Building
Products, Inc.